

Combo Hot Towel Cabinet With Sterilizer 2 In 1 (SKU16185)



SKIN+ACT

Toll Free: 1.800.418.0830

www.skinact.com
www.spaandequipment.com

International: 818.834.6640

NOTICE

No part of this document may be photocopied, reproduced, or translated into any other language without prior written consent of Spa and Equipment/SkinAct.

The information in this document is subject to change without notice at any time and should not be construed as a commitment by Spa and Equipment/SkinAct.

Spa and Equipment/SkinAct assumes no responsibility for any errors that may be in this document, nor does it make expressed or implied warranty with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

Spa and Equipment/SkinAct shall not be liable for incidental or consequential damages arising out of the furnishing, performance, or use of this document and the program material which it describes.

SKIN+ACT

Toll Free: 1.800.418.0830	www.skinact.com www.spaandequipment.com	International: 818.834.6640
---------------------------	--	-----------------------------


Thank you for choosing our towel warmer. For safe use, please read and follow these instructions.

Product Specifications

- Rated voltage / frequency: 220V50Hz or 110V60Hz
- Power: 165 W
- Inside temperature: 70–80 °C
- Safety thermostat: 100 °C
- Outer size (cm): 41 × 42 × 45
- Inner size (cm): 33 × 33 × 15
- Insulation material: Glass wool
- Weight: 9 kg
- Accessories: 2 shelves, 1 water tray

Parts

1. Main unit
2. UV (ultraviolet) switch
3. Power/operation indicator
4. Heat switch
5. Heat indicator
6. Door
7. Door gasket
8. Door microswitch
9. Power plug
10. Water tray
11. Shelf

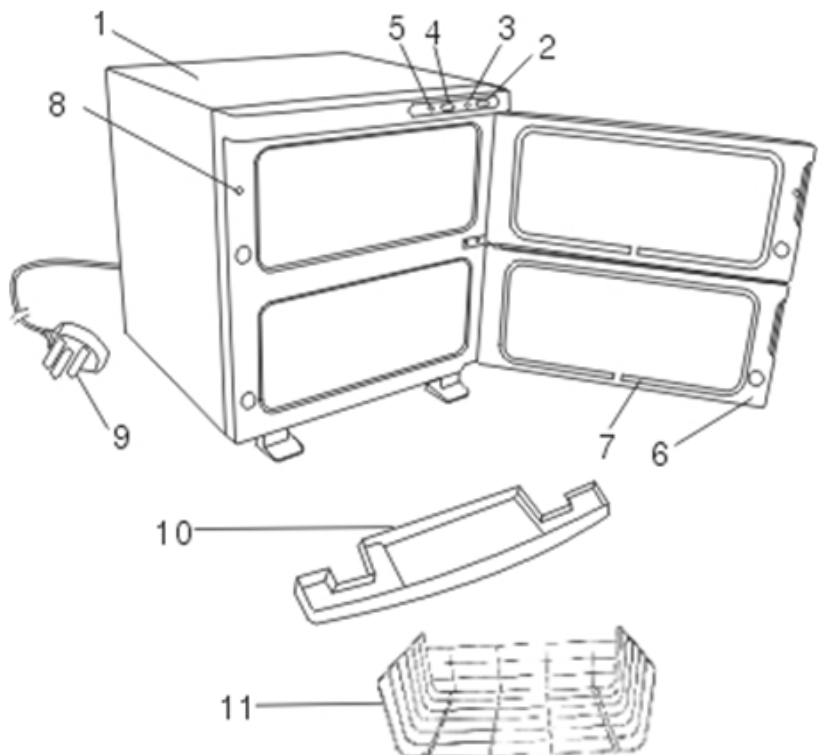

Placement & Setup (Before Operation)

- Place the unit on a stable, level surface in a well-ventilated, dry area. Keep away from heat sources, vibration, and water.
- Use only a properly grounded outlet.
- Install the water tray fully and level inside the cabinet.

Operation

1. Make sure the power switch is OFF.
2. Insert the plug firmly into the socket.
3. Open the door and remove the shelves.
4. Load towels evenly on the shelves. Do not overfill. Keep towels from touching the inner walls or heater.
 - If using moist towels, place them in the provided plastic bags to keep the cabinet clean.
5. Reinsert the shelves and close the door firmly.
6. Turn the power ON (and UV, if desired). The indicator lights will turn on and heating begins.
7. Use care when removing towels—avoid touching the hot interior surfaces.

Maintenance & Cleaning













1. Turn the power OFF and unplug the unit.
2. Allow the cabinet to cool, then remove all towels.
3. Empty the water tray.
4. Wipe the interior with a soft, dry cloth. For stubborn dirt, use a little mild neutral detergent on a cloth, then wipe dry.
 - Do not use solvents, thinners, abrasive powders, or polishes.
5. Remove shelves and wash them with water if needed; dry completely.
6. Leave the door open for a while to air-dry the interior.

Safety Notes

- Read all instructions before use and keep them for future reference.
- Use indoors only; keep away from flammable materials and water.
- Do not modify the unit. Service should be performed only by qualified personnel.
- Keep the door closed during operation; UV light should never be viewed directly.
- Supervise children and do not allow them to operate the appliance.
- Do not cover vents or block airflow.

Important Notices & Warnings

- If the power cord or plug is damaged, stop using the appliance. Have it replaced with the same type by the manufacturer, a service agent, or similarly qualified personnel.
- Use only with the rated voltage and frequency.
- Operate the appliance only as described in this manual.
- Do not unplug or operate the unit with wet hands.
- Do not use outdoors.
- Do not operate the appliance if the door or gasket is damaged.
- We may improve the product and instructions from time to time; specifications and appearance are subject to change without prior notice.
- Damage caused by incorrect operation or use contrary to this manual is not covered by our responsibility.

Symbol	Category	Instruction
	Forbidden	Do not crush, damage, bend, stretch, or twist the power cord. Do not overload or insert the cord into improper places, as this may cause damage or fire.
	Forbidden (outdoor use)	Do not use the unit outdoors. Exposure to rain or moisture may cause electric shock or short-circuit accidents.
	Forbidden (branch wires)	Use only a dedicated power socket with a rated capacity over 15A. Do not use twin or branch sockets.
	Forbidden (children)	Do not allow children to use this unit unsupervised. Keep the unit out of their reach to prevent burns or electric shock.
	Unplugging	Do not pull the cord to unplug the unit. Hold the plug firmly when disconnecting to prevent wire damage or deformation.
	Forbidden (wet hands)	Do not touch the plug or switches with wet hands to avoid electric shock.
	Attention	Do not drop or strike the unit. Strong impact may damage the internal components and cause malfunction.
	Attention	Towels must be placed inside the provided plastic bags before putting them into the warmer. Without the bag, towels may dry out too much.
	Attention	Place towels on the shelf only. Do not let them touch the inner heater surface. Contact may damage the bag or towel.
	Attention	Do not leave towels in the warmer for more than 24 hours. They may become dry, deformed, or develop odor.
	Forbidden (disassembly)	Do not disassemble, repair, or modify the unit yourself. Only qualified service personnel may service it, to avoid fire or hazards.
	Grounding	Always use a three-prong grounded socket to prevent electric shock or leakage.

Dimensions: 18.9"L 18.5"D 19.9"H (24 lbs)



Inside dimensions: 12.5"L x 5.5"W x 12"D

