TOUCHBeauty



CREAM BOOSTER

SKU24547

INSTRUCTION MANUAL

Safety Instructions:

To ensure proper operation of this device, please read this instruction manual carefully before using the device and keep it for further reference.

A WARNING

AL WARNING

- This device is not a toy, keep out of reach of children.
 Please verify the device before you start using it. Do not use
- if there is any damage.

 Please, keep the USB cable and the device charging port dry.
- Do not use the device while charging.

∆ CAUTION

- The following persons should not use this device:
 Pregnant women or while nursing or during menstruation:
 - Pregnant women or while nursing or during me persons with allergies;
 - Persons with facial nerve disorders; persons with metal, silicone, or plastic implants due to fractures or plastic surgery;
 - Persons with open wounds, chapped or swollen skin in the area of use; persons with severe skin diseases on the face;
 - area of use; persons with severe skin diseases on the face;
 Persons who have a pacemaker, implants or metal prosthesis.

 This device is not intended for use by persons (including
 - children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the device by a person responsible for their safety.
 - Immediately stop using the device and consult a doctor if you feel any discomfort.

 When using the light therapy mode, do not look directly at the
 - When using the light therapy mode, do not look directly at the light source to avoid discomfort on the eyes. Close your eyes during use.
 - Keep the device out of reach of children.
 Do not share the same device with others.
 Regularly clean the device and the accessories to extend its lifetime.
 - Regularly clean the device and the accessories to extend its lifetime.
 Do not attempt to disassemble, repair or modify the device by
 - yourself to avoid accidents.

 Remove any jewelry/accessories and tie your hair when using the device, to prevent hair and jewelry from interfering with the device.
 - This device has a lithium battery. Do not place or store the
 device for long periods in a hot or humid environment. If
 you do not intend to use the device for a long time, store it
 after it is fully charged. Do not throw the device into a fire or
 out it in the general household waste. Please dispose of this

device at an official recycling point.

 
Device Specifications:

- Name: Cream Booster
- Model No.: TB-1981K
- Input: 5V === 0.5A
- . Type of Battery: Li-polymer 3.7V 500mAh
- Executive Standard: Q/XM1002-2020 Q/XM1021-2020

Device Description:

① Massage Head

- Light Therapy Source
- High Intensity Indicator
 Low Intensity Indicator
- ⑤ Clean Indicator
- Red LED Indicator
 Brighten Indicator
 - Moist Indicator
 - Moist Indicator
 Power/Mode Button
 - (i) Intensity Level Button
 - USB Charging Port
 - Magnetic Cotton Ring
- (3) Sensor Bars (A) USB Cable



Picture 1

Preparation Instructions:

- X This device battery is low before use. Please charge the device with the USB cable before you start using it.
- The device has a low battery alarm system: When the battery is low, the device high and low-intensity indicators flash three times, and the device shuts down automatically.

Charging the Device

- · Make sure the device is turned off.
- Insert the small plug into the USB charging port on the bottom
 of the device. Insert the USB cable into an adapter (adapter
 is not included) and plug it into a wall socket. (Picture 2)



- While charging, the high and low-intensity indicators flash at the same time. When the battery is fully charged, the high and low-intensity indicators light up continuously. Charging the device takes approximately 3 hours.
- When the battery is fully charged, the device can be used consecutively for about 50 minutes.
 Caution: Do not attempt to replace the device battery.

 
How to Use:

To ensure the correct operation of this device, please read the instructions carefully before use.

How to Operate

- Press and hold the power/mode button to turn on the device.
 The device automatically starts the "clean" mode by default.
 Short press the power/mode button to switch between modes
 - in a cycle: "clean" "red LED" "brighten" "moist". (Picture 3)

 This device has two adjustable intensity levels. The
 - high-intensity level vibration is stronger than the low-intensity level, and the temperature is higher. The low-intensity temperature is 38 C and the high-intensity temperature is $42 \, \mathrm{C}$ (only "red LED", "brighten" and "moist" have hot temperature function).
 - In any mode, press and hold the power/mode button to turn off the device.
 - Each mode has an auto-timer of 3 minutes. Without operation, the device automatically turns off after 3 minutes with a sound.



Using Steps

- Remove makeup from the face before you start using the device.
 Make sure you touch the sensor bars while using the device on
- ** Make sure you touch the sensor bars while using the device on both sides of the device (the vibration function only works if you are touching both sensor bars with your hand at the same time).
 Clean Mode
 - Remove makeup and dirt from the face.
 - Remove the magnetic cotton ring from the device, place a cotton pad on the massage head and use the magnetic cotton ring to secure the cotton pad. (Picture 4)





Picture 4

- . Soak the cotton pad thoroughly with toner.
- Press and hold the power/mode button to turn on the device and the "clean" mode. Choose the intensity level according to your skin needs.
- Hold the device with your hand touching both sides of the sensor bars. Apply the massage head to the skin. The device will start vibrating slightly. Move the device gently in a circular motion starting from the center of the face outwards to remove stubborn dirt from pores and cleanse the skin. Remove the cotton pad from the device after use. (Picture 5)
- Recommended use: Use the "clean" mode 2-3 times a week, 3 minutes each use for better results.
- Recommended cleaning area and order: T-zone (forehead and nose) → left & right cheeks → chin.
- After using the device, rinse your face with water and follow your daily skincare regimen.



"Red LFD" Mode

- "clean" mode.

 Turn on the device and switch to "red LED" mode. Choose the
- intensity level according to your skin needs.

 Hold the device with your hand touching both sides of the sensor bars. Place the massage head surface 2-3 cm away from your face and expose the skin to the light source evenly. When using the light therapy mode on your skin, close your eyes to avoid

discomfort during use. (Picture 6)

- · Recommended use: Use the "red LED" mode once every day, 3 minutes each use for better results.
- . Recommended using area and order: T-zone (forehead and nose) → left & right cheeks → chin.
- After using the device follow your daily skincare regimen.



Picture 6

"Brighten" Mode

"Moist" Mode

. Use this mode after you remove your makeup or after using the "clean" mode or after you use the "red LED" mode. . Apply and spread serum or lotion to the face. (Picture 7)



Picture 7

- . Turn on the device and switch to "brighten" mode. Choose the intensity level according to your skin needs. . Hold the device with your hand touching both sides of the sensor
- bars. Place the massage head on the skin. The device will start vibrating slightly. Move the device gently in a circular motion starting from the center of the face outwards to boost the absorption of your skincare products and to brighten the skin. (Picture 8)
- . Recommended use: Use the "brighten" mode once every day. 3 minutes each use for hetter results
- · Recommended using area and order: T-zone (forehead and nose) → left & right cheeks → chin.
- · After using the device follow your daily skincare regimen.



Picture 8

- . Use this mode after you remove your makeup or after using the "clean" mode or after you use the "red LED" mode.
- Apply a hydrating/moisturizing sheet mask to the face. (Picture 9)

- . Turn on the device and switch to "moist" mode. Choose the intensity level according to your skin needs.
- Hold the device with your hand touching both sides of the sensor bars. Place the massage head on the skin. The device will start vibrating slightly. Gently press the massage head onto the skin from the center of the face outwards to increase the nutrients absorption of the sheet mask and to deeply nourish the skin. (Picture 10) Recommended use: Use the "moist" mode 1-2 times a week.
- 3 minutes each use for better results. · After using the device follow your daily skincare regimen.



X After using the device, turn it off, Clean the device with a clean slightly wet cloth after each use. After cleaning, place the device in a well-ventilated place to extend its lifetime.

Recommended Use:

Choose the appropriate treatments that best suit your skin needs

and time.							
Skincare			Clean	Red LED		Moist	
Deep Cleansing	3mins		~				
Quick Moisturization	3mins	Remove makeup				√	
Daily hydration & rejuvenation	6mins			~	~		
Cleansing & moisturizing the skin	9mins		~		~	~	
Complete skincare (1-2 times a week)	12 mins		~	~	~	~	

Cleaning & Maintenance:

- Before and after every single use, please clean the device body and massage head to ensure the best performance of this device.
- . Make sure the device is turned off before you start cleaning. . Clean the device with a clean slightly wet cloth. Do not immerse the device in water.
- Do not use alcohol, steel wool, abrasive cleansers, chemicals or corrosive liquids to clean the device. . Do not use lubricants, detergents, polishing agents or air

fresheners on this device.

Storage: This device has a lithium battery. Do not place or store the device for long periods under a hot or humid environment, If you do not intend to use the device for a long time, store it after it is fully

charged.

Recycling: The built-in battery contains substances that may pollute the environment. When disposing of this device, do not put it in the general household waste. Please dispose of this device in an official recycling point to contribute to environmental protection.

Varranty & Support

The device does

Troubleshooting Possible Cause Problem Solution The battery is

running low or quided. not work properly. out of nower

Charge the device as

Other problems.		Consult your local dealer.			
Note: Milks de les efficies est est est de la region de l					

Note: If the device still does not work properly after using the above solutions, please stop using the device and contact your local dealer.

After-Sales Service
Please visit our website www.touchbeauty.com or contact our
customer service team customer@touchbeauty.com if you need to
learn about our products or if you need any information. You can
also contact an affiliate dealer in vour country.

MANUFACTURER: TOUCHBEAUTY BEAUTY & HEALTH (SHENZHEN) CO., LTD

ADDRESS: 29/F, Block B, Tiley Central Plaza, No.195
Haide 3rd Road, Nanshan District, Shenzhen China