Aluma Electric Spa Treatment Table (SKU25526)



SKIN+ACT

Toll Free: 1.800.418.0830	www.skinact.com www.spaandequipment.com	International: 818.834.6640

Copyright © 2025 Spa and Equipment, All Rights Reserved

NOTICE

No part of this document may be photocopied, reproduced, or translated into any other language without prior written consent of Spa and Equipment/SkinAct.

The information in this document is subject to change without notice at any time and should not be construed as a commitment by Spa and Equipment/SkinAct.

Spa and Equipment/SkinAct assumes no responsibility for any errors that may be in this document, nor does it make expressed or implied warranty with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

Spa and Equipment/SkinAct shall not be liable for incidental or consequential damages arising out of the furnishing, performance, or use of this document and the program material which it describes.

SKIN+ACT

Important Safety Instructions

1. Read Before Use: Before connecting, operating, or adjusting the bed, please read the user manual thoroughly.

2. Power Connection: This electric massage bed uses a three-prong power cable. Always connect it to a grounded three-hole outlet to ensure proper grounding and reduce the risk of electric shock during operation.


3. Water Safety: Do not allow the power plug, buttons, or any part of the power cable to come into contact with water or other liquids.

4. Body Safety: Do not place your hands, feet, head, or any part of your body into the gaps labeled Ⓐ, Ⓑ, or Ⓒ while the massage bed is in operation.

5. Damaged Components: Do not use the massage bed if the power plug, buttons, or any related components are damaged.

6. Motor Usage Frequency: The motor is designed for intermittent use, with a recommended operating frequency of up to 6 minutes per hour.

7. Maintenance: Maintenance and repairs must only be performed by officially trained personnel.

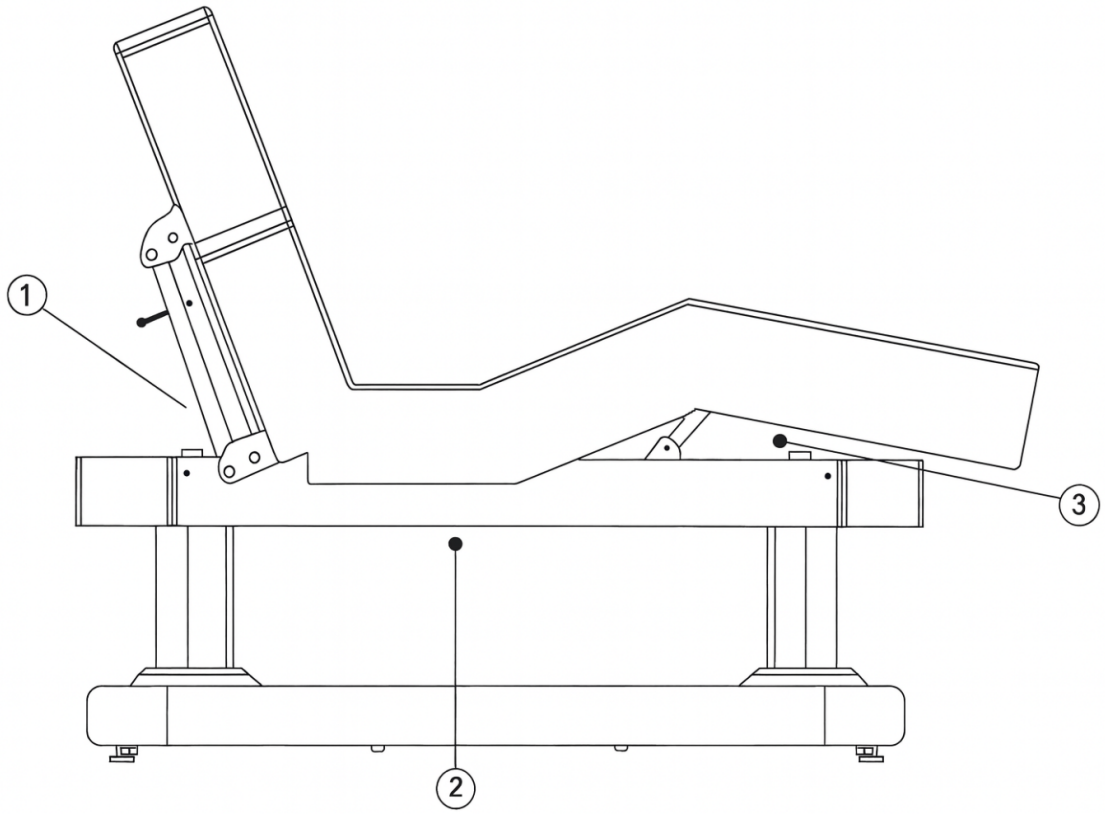

Safety Precautions

1.Children & Unconscious Individuals: Children under 14 years of age must not use the chair without supervision. Unconscious individuals must not use the chair at any time.

2. Damaged Electrical Parts: Do not use the chair if the power cable or plug is damaged. Repairs must only be performed by qualified professionals or authorized service providers.

3. Voltage Compatibility: Ensure the chair is connected to a power supply with the correct voltage. Using the wrong voltage may damage the unit.

4. Wet Hands Warning: Do not touch the power plug or cable with wet hands to avoid electric shock.

5. Power Connection: Do not plug in the chair until it has been fully assembled and properly installed.

6. Cable Placement: Arrange the power cable securely to prevent tripping hazards.

7. Cleaning: Clean the exterior of the chair using a soft cloth dampened with a diluted neutral detergent.

8. Unplug When Not in Use: Always unplug the massage chair when it is not in use.

9. Unauthorized Repairs: Do not attempt to disassemble or repair the chair yourself. Contact authorized service personnel for maintenance or repairs.

Technical Specifications

Dimensions: 80.3" × 33.5" × 26.8"–34.6" (L × W × H)

Minimum Height: 26.8"

Maximum Height: 34.6"

Net Weight: 278 lbs


Gross Weight: 388 lbs


Weight Capacity: 518 lbs


Input Voltage: AC 100–130V / 220–240V, 50/60 Hz


Output Voltage: DC 24V

Power Consumption: 160W

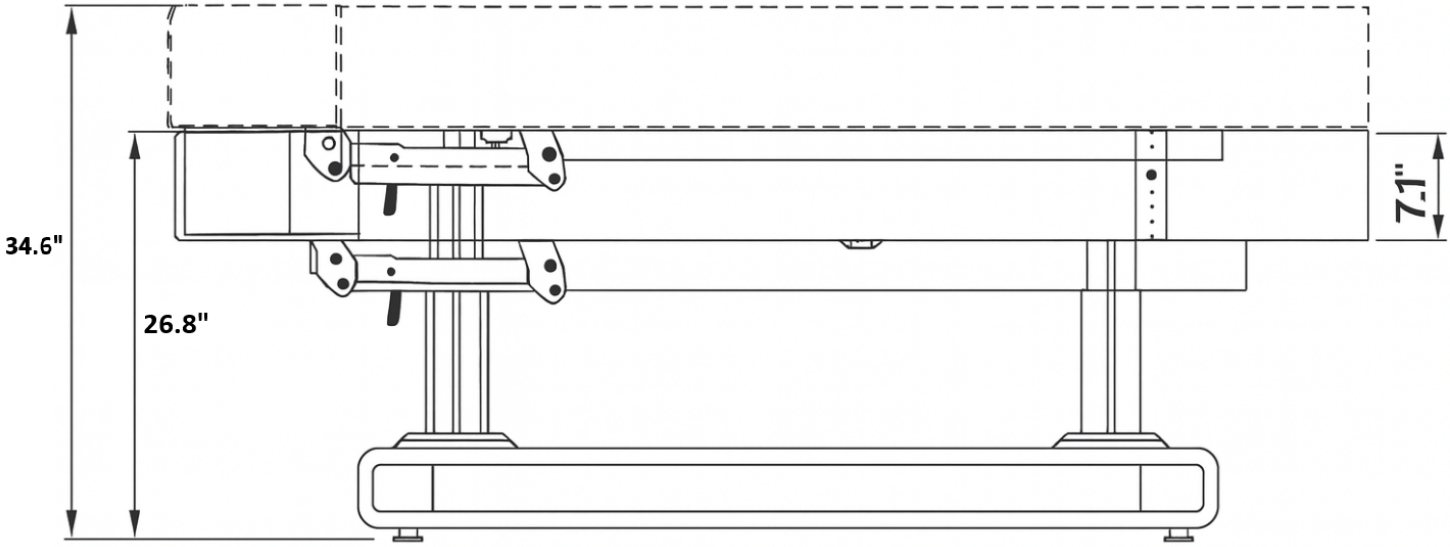
34.6"
26.8"
7.1"

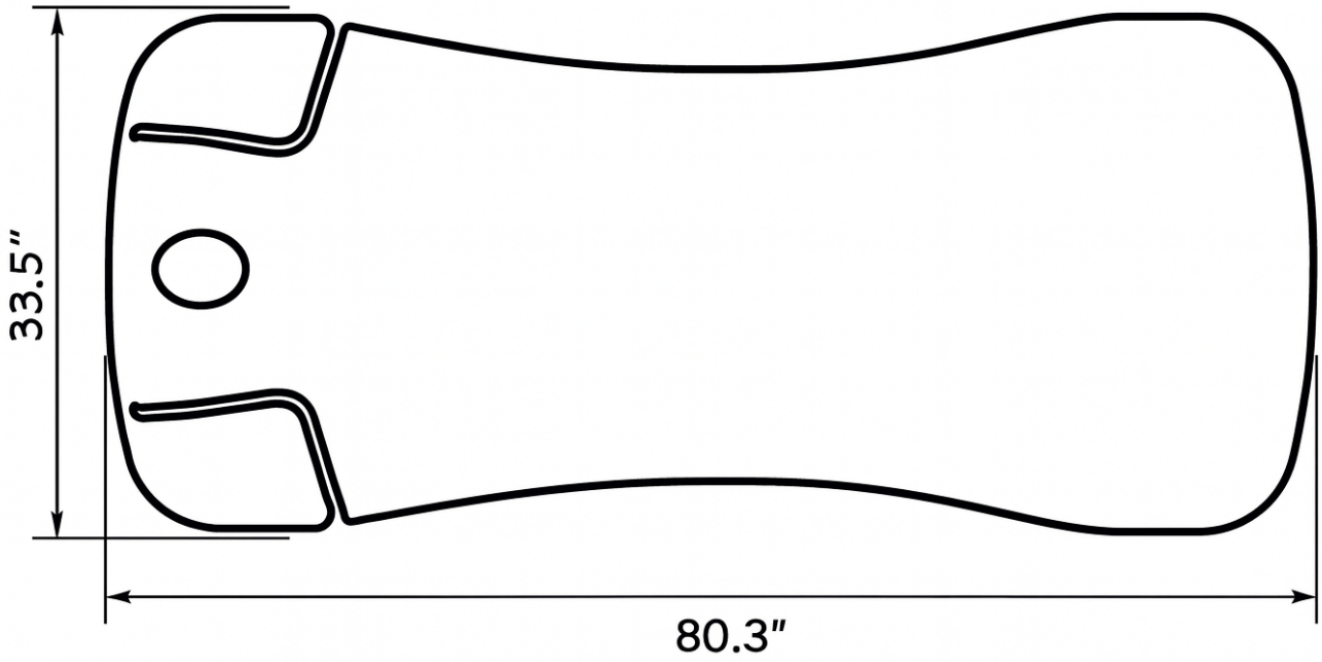
33.5"
80.3"

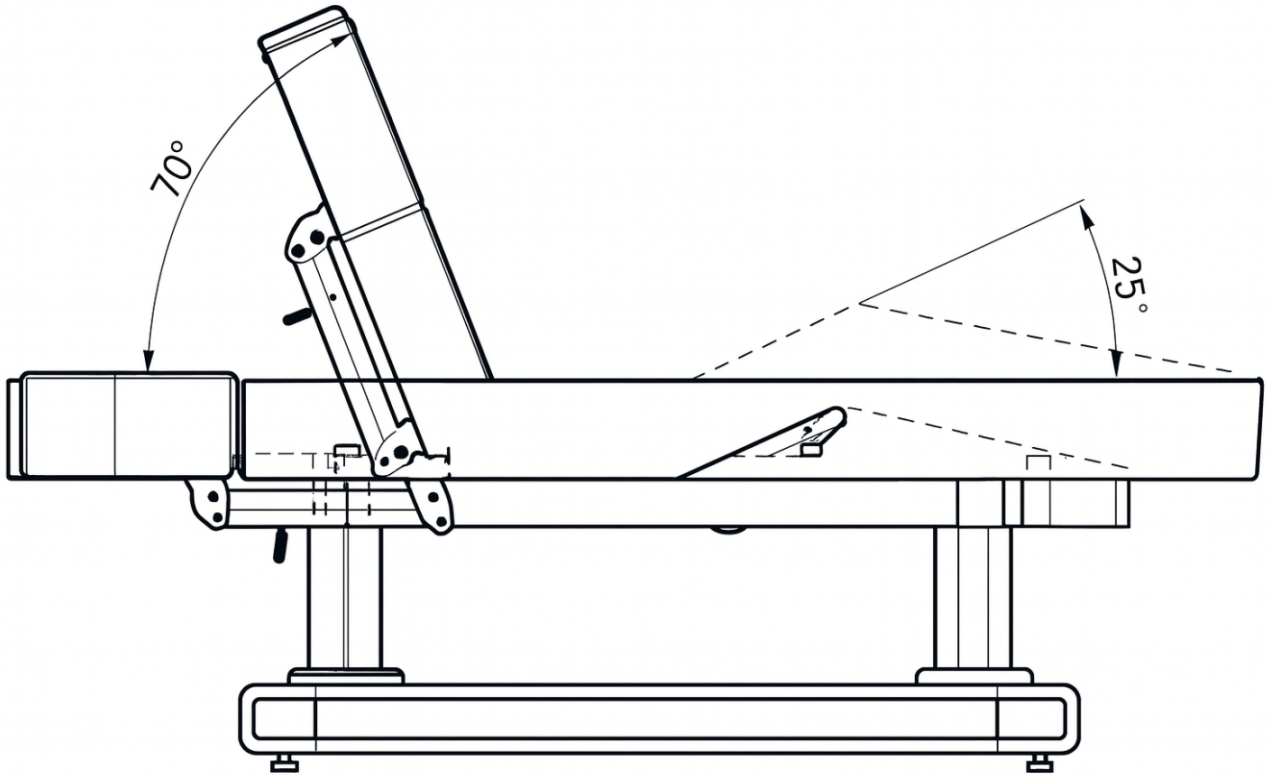
70°
25°

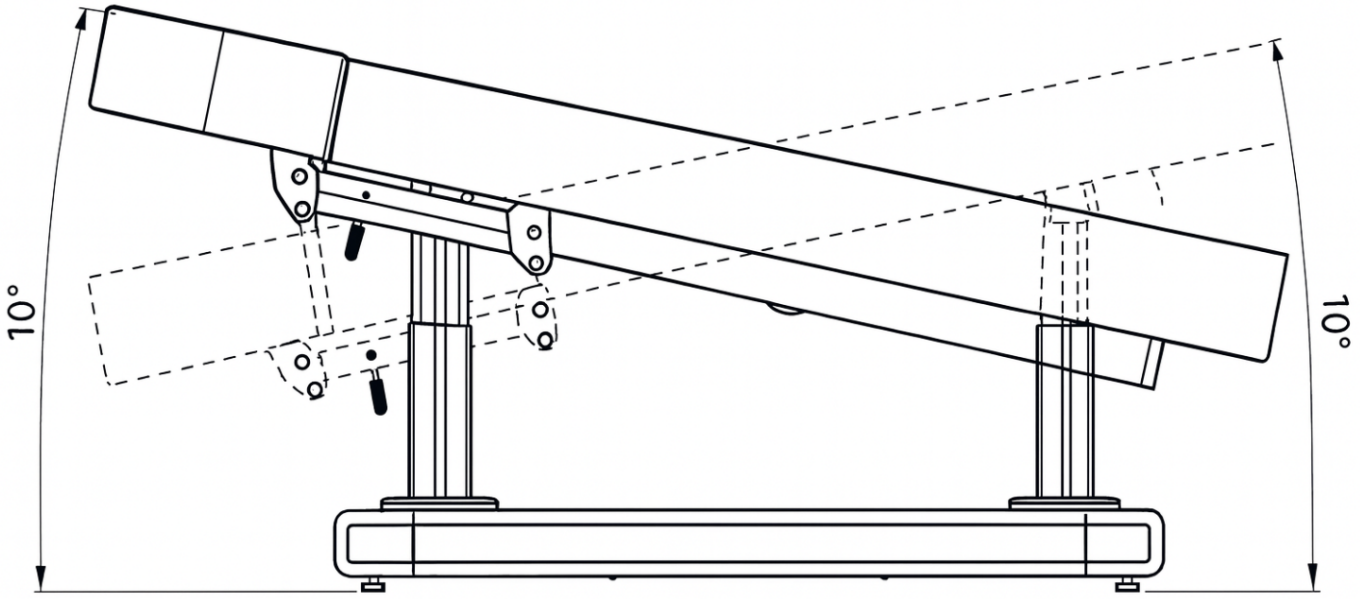
10°
10°

Remote Control Instructions

1. Hand Control On/Off
Press the [Hand Control] button to turn on the hand control.
Press again to turn it off — the bed returns to its original position.
Press once more to stop recovery.

2. Bed Height Adjustment
Press [Up] to raise the bed.
Press [Down] to lower the bed.

3. Front End Height Adjustment
Press [Up] or [Down] to adjust the front end incline.

4. Back End Height Adjustment
Press [Up] or [Down] to adjust the back end incline.

5. Backrest Incline
Press [Up] or [Down] to adjust the backrest angle.

6. Footrest Incline
Press [Up] or [Down] to adjust the footrest angle.


7–10. Memory Function

Set the bed to your desired position.

Long press [SET] to save the position.

Press [P1], [P2], or [P3] to store it.

Up to 3 memory positions can be saved.

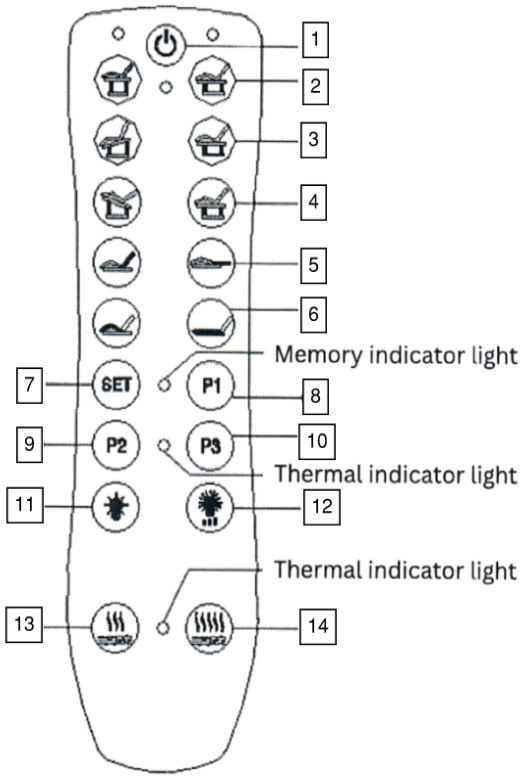

11. Light On/Off & Color Change
Press [Light] to turn the light on/off and change colors.

12. Light Intensity Adjustment
Press [Brightness] to adjust light intensity.

13. Heating Function (Medium)
Press [Heat Low] for medium heating.

14. Heating Function (High)
Press [Heat High] for high heating.


Operation

Height Adjustment

- Turn on the hand control.

• Press the ⬆ button to raise the bed.


• Press the ⬇ button to lower the bed.

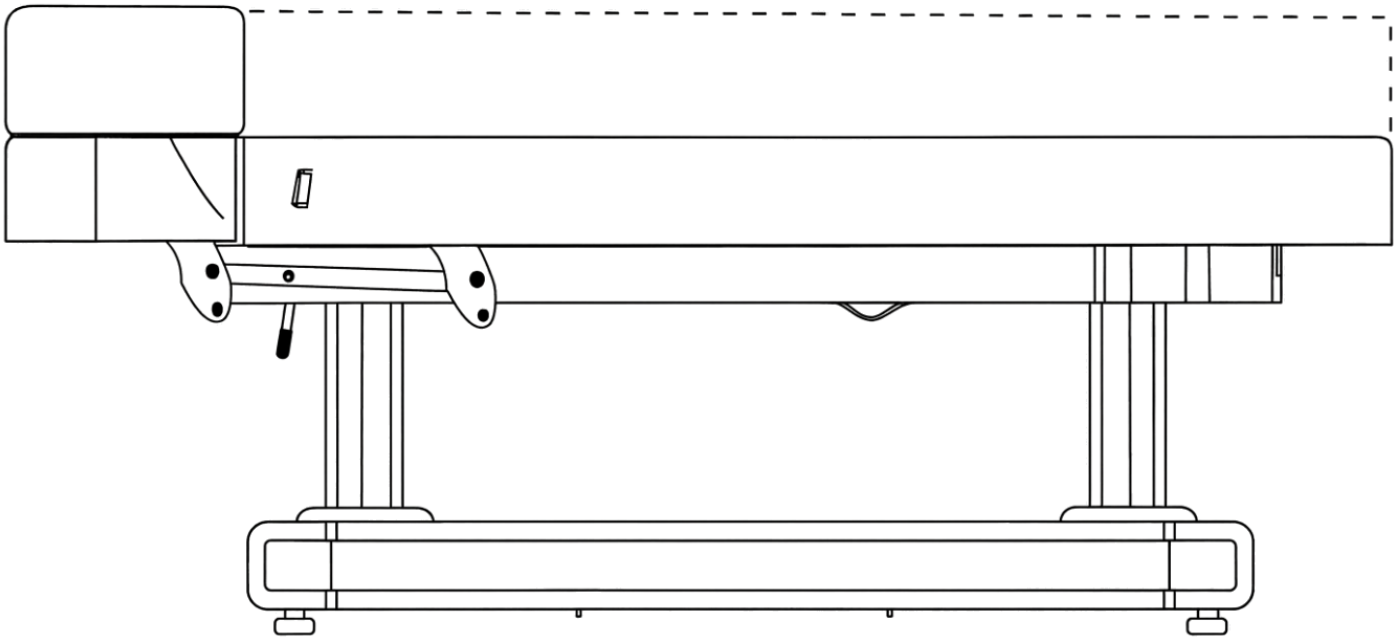

Incline Adjustment


• Press the corresponding ⬆ or ⬇ buttons to control the bed's incline angle.

• Use the designated buttons for backrest and footrest to adjust each section independently.

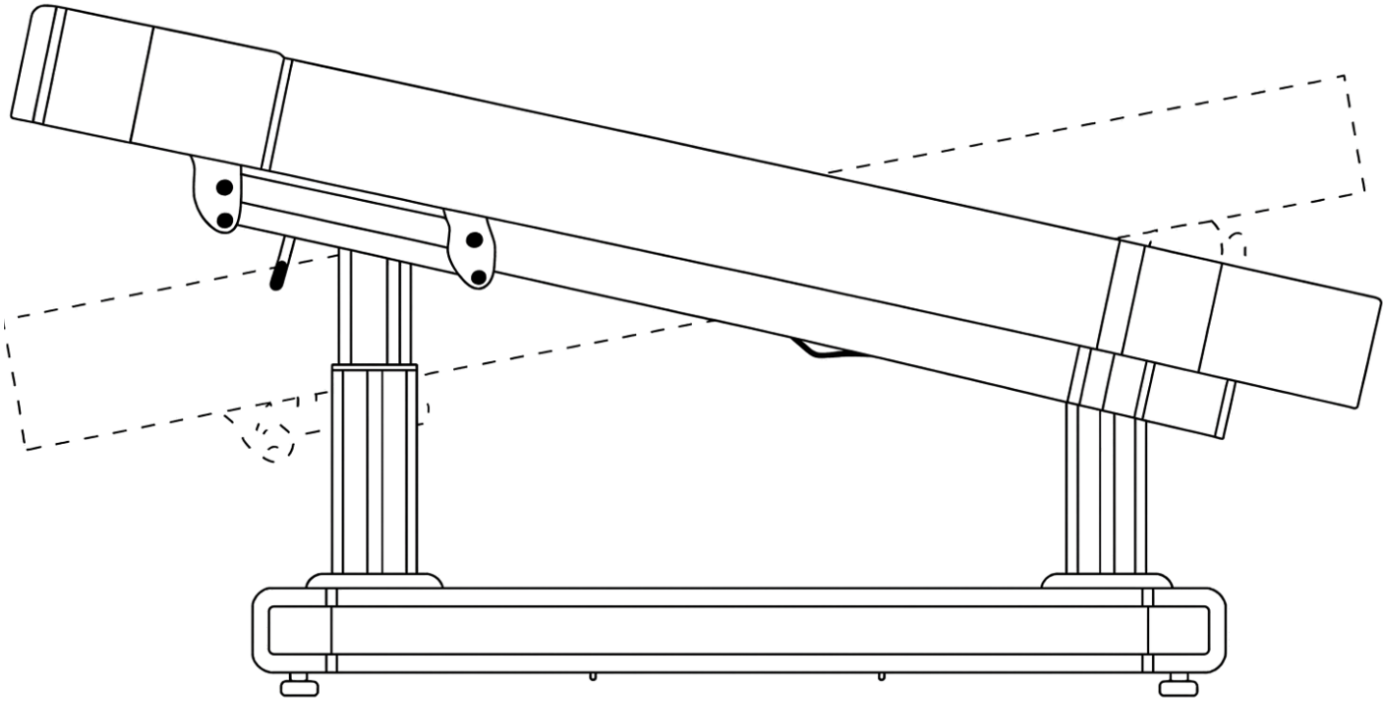


Backrest Adjustment

- Press the ⬆ button to raise the backrest incline angle.
- Press the ⬇ button to lower the backrest incline angle.

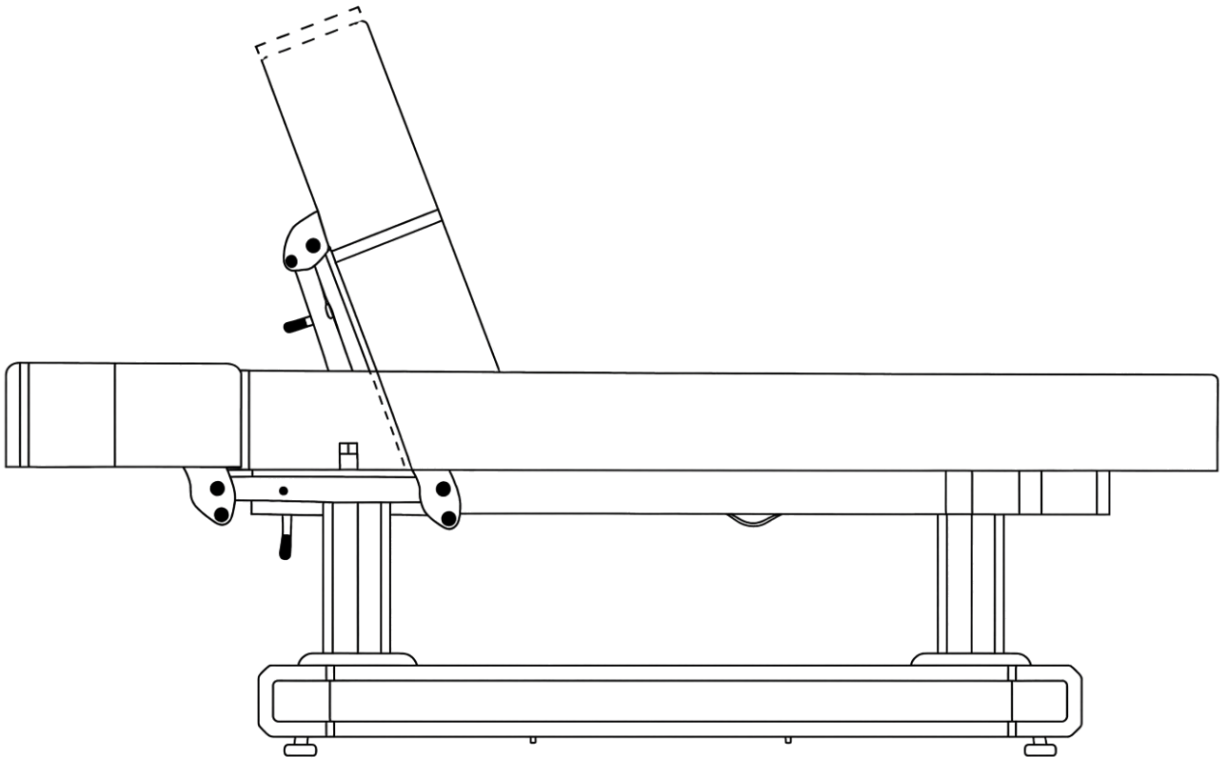

Footrest Adjustment


- Turn on the hand control.
- Press the ⬆ button to raise the footrest.
- Press the ⬇ button to lower the footrest.

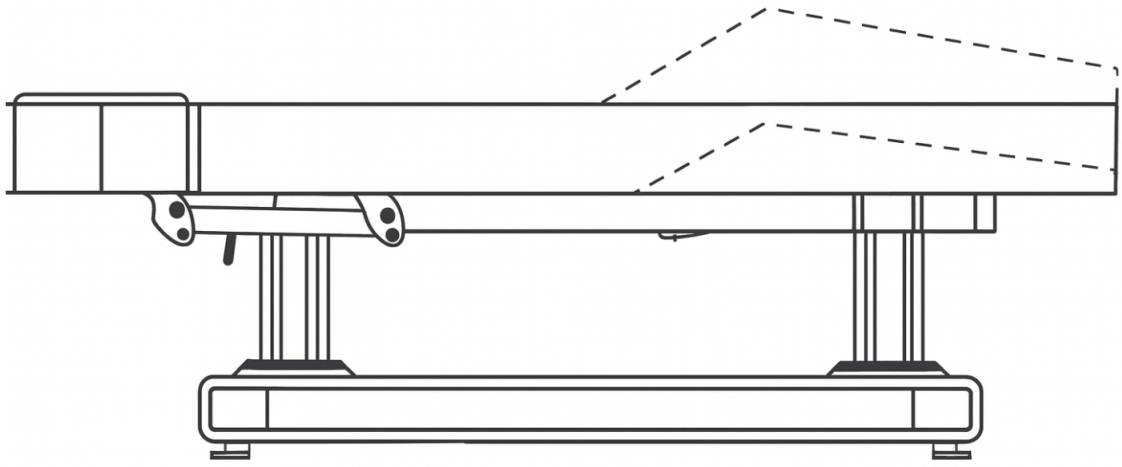

Armrest Adjustment

- Press down the gas lift in the direction of the arrow without releasing your hand.
- While holding it, gently press down the armrest to adjust its angle.
- If released, the armrest will automatically return to its original position

(Refer to the illustration for guidance.)

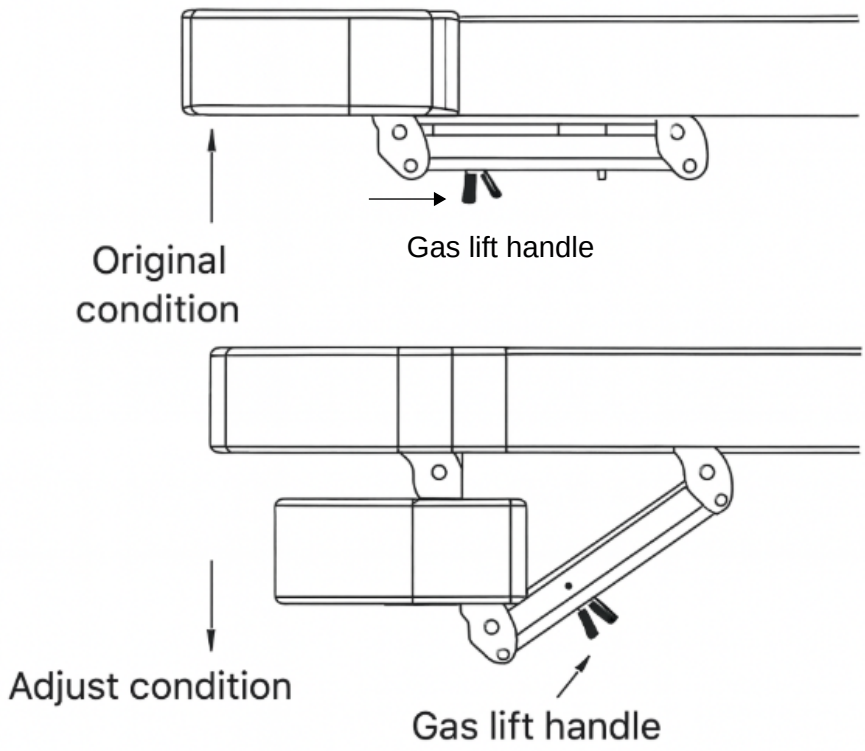


Rubber Foot Adjustment

• Rotate the rubber foot to adjust its height and correct uneven ground conditions.

• Once the desired height is set, tighten and secure it upward with the nut.

• (Refer to the illustration for proper adjustment.)

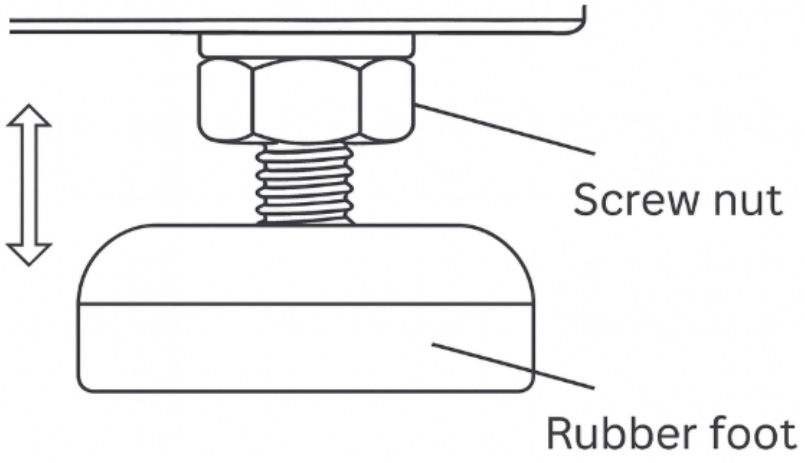

Maintenance

1. Daily Cleaning: Wipe off dust using a soft, dry towel.

2. Removing Stubborn Dirt: If stubborn dirt cannot be removed with a dry towel, use a soft cloth dampened with diluted neutral detergent. After cleaning, wipe again with a dry towel.

3. Prohibited Substances: Do not use benzene, thinner, gasoline, or other solvents. These may damage the leather or cause corrosion of the product's surface.

4. Storage and Operating Environment: Do not place the product in direct sunlight or in areas with high moisture, as this may cause damage.

5. Temperature & Humidity Range: The product may be used in environments with temperatures between -5°C and 50°C, and humidity levels between 45% and 85%.

Fault Diagnosis

If there is an issue while using the product, please check and resolve it by following the guide below:

Phenomenon	Diagnosis	Operation of Elimination
Press the pedal but no response	1. Controller power switch may not be on. 2. Pedal may not be set to maximum. 3. Power plug may not be connected. 4. Transformer plug connections may be loose.	1. Restart the controller power switch. 2. Test other buttons to confirm functionality. 3. Disconnect and reconnect the power plug. 4. Reconnect the transformer plug.
Noise and shaking while moving up or down	Screws have loosened.	Tighten all screws.
Light remains off even though the switch is on	Fuse has burned out.	Replace the fuse.

Remarks: Improvements to the product may not be communicated if they do not affect appearance or function.