48 Piece Double Door Towel Warmer/Hot Towel Cabinet (SKU16181)



SKIN+ACT

Toll Free: 1.800.418.0830	www.skinact.com www.spaandequipment.com	International: 818.834.6640

Copyright © 2025 Spa and Equipment, All Rights Reserved

NOTICE

No part of this document may be photocopied, reproduced, or translated into any other language without prior written consent of Spa and Equipment/SkinAct.

The information in this document is subject to change without notice at any time and should not be construed as a commitment by Spa and Equipment/SkinAct.

Spa and Equipment/SkinAct assumes no responsibility for any errors that may be in this document, nor does it make expressed or implied warranty with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

Spa and Equipment/SkinAct shall not be liable for incidental or consequential damages arising out of the furnishing, performance, or use of this document and the program material which it describes.


SKIN+ACT

Product Specification

Spec	Left column	Right column
Rated power	220V 50Hz / 110V 60Hz	220V 50Hz / 110V 60Hz
Power	320W	160W
Inside temp	70–80°C	70–80°C
Safety unit	Safety thermostat (100°C)	Safety thermostat (100°C)
Outer size (cm)	41 × 42 × 45	41 × 32 × 26
Inside size (cm)	33 × 33 × 15	33 × 23 × 15
Insulation material	Glass wool	Glass wool
Weight	9 kg	6 kg
Accessories	2 Shelves, 1 Water tray	1 Shelf, 1 Water tray

Parts

1. Main unit
2. Power switch
3. Indicator light
4. Door
5. Door pad
6. Water tray
7. Power cord
8. Shelf

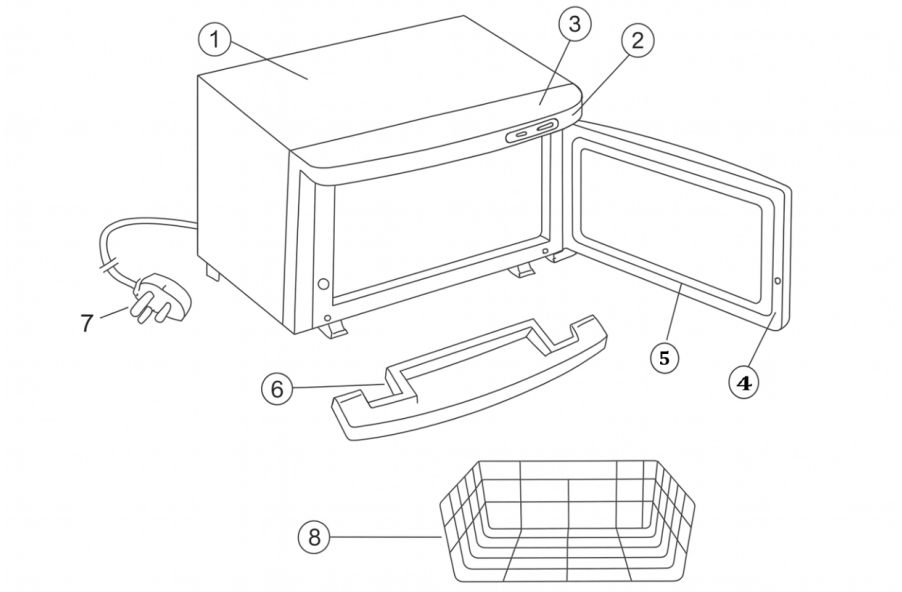

Before Operation

• Place the unit in a stable, well-ventilated area with low temperature and minimal vibration. Keep it away from water.

• To avoid electric shock, always connect the unit to a grounded outlet.

• Ensure the water tray is installed securely and inserted horizontally with both hands.

Operation

1.Make sure the power switch is OFF.

2.Plug the power cord into the socket.

3.Insert the shelf into the warmer and close the door.

4.Place towels on the shelf. Do not overload. Avoid direct contact between towels and the warmer's interior; use a plastic bag if needed.

5.Close the door securely.

6.Switch the power ON. The indicator light will turn on, and the unit will begin heating.

Note: Do not touch towels directly when removing them—they may be hot.

Maintenance

1.Turn the power switch OFF.

2.Unplug the power cord.

3.Once the warmer cools, remove all towels and wipe the inside dry.

4.Empty the water tray.

5.Wipe the interior with a dry cloth. For stubborn dirt, use a mild dish detergent on a cloth. Avoid solvents (e.g., thinner, polish).

6.Wash removable shelves with water, then dry completely.

7.Leave the door open to ventilate and fully dry the interior.

Safety Notes

- Read these instructions carefully before use.
- Follow all safety precautions to prevent accidents and damage.
- Keep this manual in an accessible place for future reference.
- Do not use near water, flammable substances, or in unstable conditions.

Symbol	Category	Instruction
⛔	Forbidden	Do not bend, twist, stretch, or crush the power cord. Do not place heavy objects on it or insert the cord into damaged sockets. This may cause electric shock or fire.
⛔	Forbidden (outdoor use)	Do not use the unit outdoors. Exposure to rain may cause electric shock or fire.
⛔	Forbidden (branch wires)	Use only a dedicated power socket rated over 15A. Do not connect using twin or branch sockets.
⛔	Forbidden (children)	Keep the unit out of reach of children. Children must not operate the product to prevent burns or electric shock.
🔌	Take out the plug	Always pull the plug, not the cord, when unplugging. Pulling the cord may damage the wire or deform the plug.
💧	Do not operate with wet hands	Do not touch the plug or power switch with wet hands, as this can cause electric shock.
⚠️	Attention	Do not drop or apply strong force to the unit—it may cause malfunction or damage.
⚠️	Attention	Towels must be wrapped in a plastic bag before use. Otherwise, towels may dry unevenly.
⚠️	Attention	Place towels on the shelf only. Do not let them touch the inner walls, as heat may melt the plastic bag or cause discoloration.
⚠️	Attention	Do not leave towels in the warmer for more than 24 hours, as they may become deformed, dry out, or develop odors.
⛔	Forbidden (disassembly)	Do not disassemble, repair, or modify this product yourself. Service must be done by qualified technicians only. Unauthorized repair may cause malfunction or injury.
⏚	Ground wire	Always use a three-prong socket with a ground connection to prevent electric shock or leakage.

Dimensions
16”L x 16.5”D x 17.5”H

Inside Dimensions
13" Depth x13" Width x 6" Height