Moda Wooden Spa Trolley Cart (SKU17724)



SKIN+ACT

Toll Free: 1.800.418.0830	www.skinact.com www.spaandequipment.com	International: 818.834.6640

Copyright © 2025 Spa and Equipment, All Rights Reserved

NOTICE

No part of this document may be photocopied, reproduced, or translated into any other language without prior written consent of Spa and Equipment/SkinAct.

The information in this document is subject to change without notice at any time and should not be construed as a commitment by Spa and Equipment/SkinAct.

Spa and Equipment/SkinAct assumes no responsibility for any errors that may be in this document, nor does it make expressed or implied warranty with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.


Spa and Equipment/SkinAct shall not be liable for incidental or consequential damages arising out of the furnishing, performance, or use of this document and the program material which it describes.

SKIN+ACT

● The instructions：


1.Please read this manual carefully before assembling or using the trolley, and retain it for future reference.
2.This product is not intended for use as a mode of transportation.
3.Use of this product is restricted to individuals aged 14 and above. It should not be used by children or individuals with impaired judgment unless under proper supervision.
4.Do not attempt to disassemble or modify the product without authorization. For repairs or service, please contact your local distributor or service provider.

● Product specification：

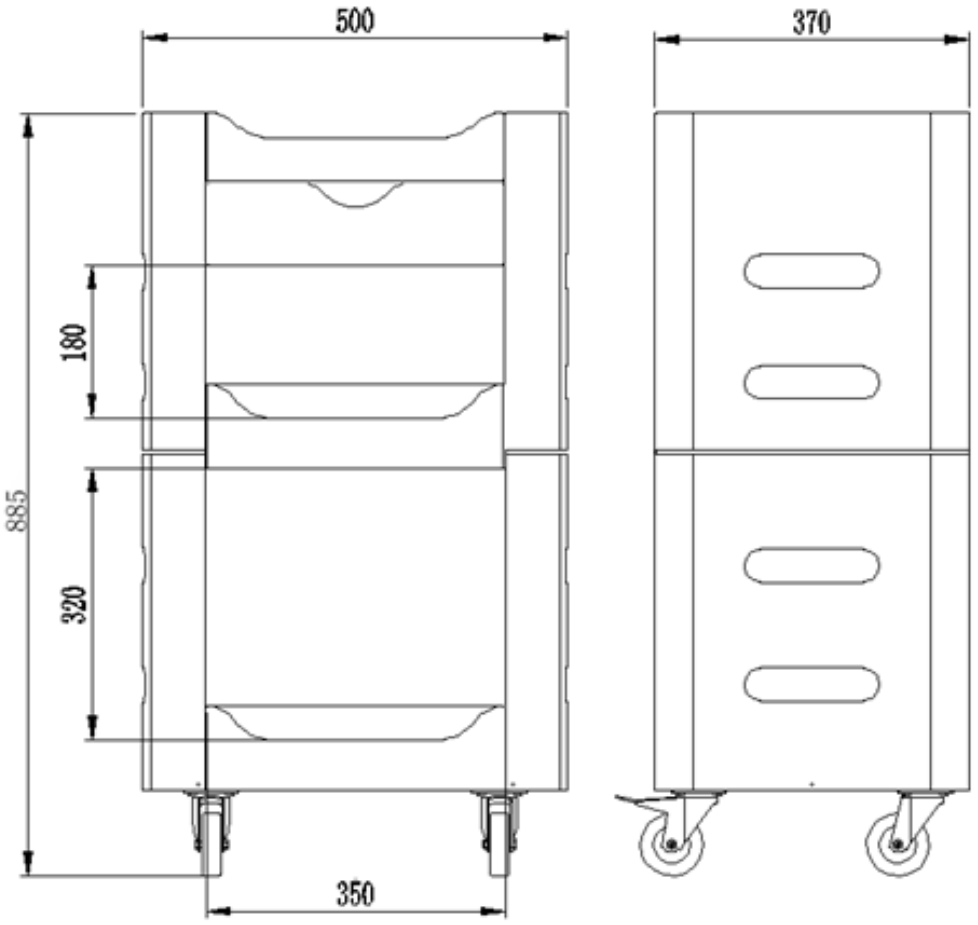


Product specification：
Size:500x370x885mm
N.W:19kg
G.W:25kg
Maximum loading:30kg

●spare part list:

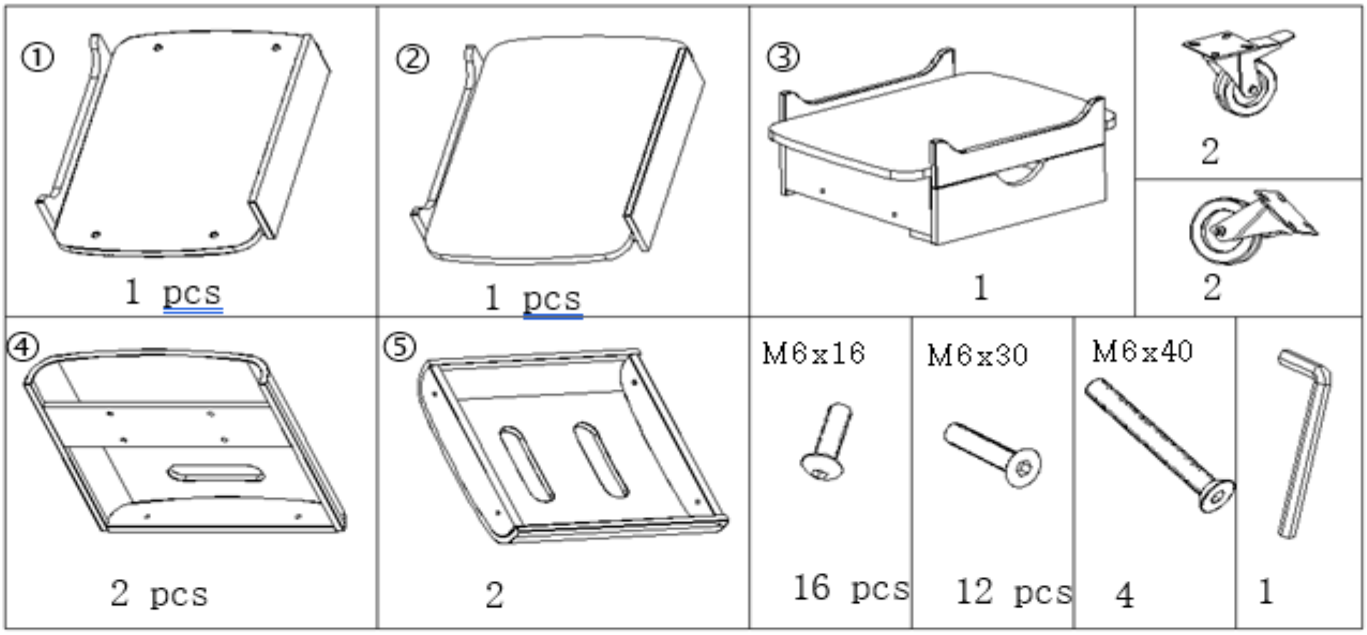


●install specification:

1. Attach parts ① and ⑤ together. Secure them using four M6x30 screws and tighten with a spanner, as shown in the image below.

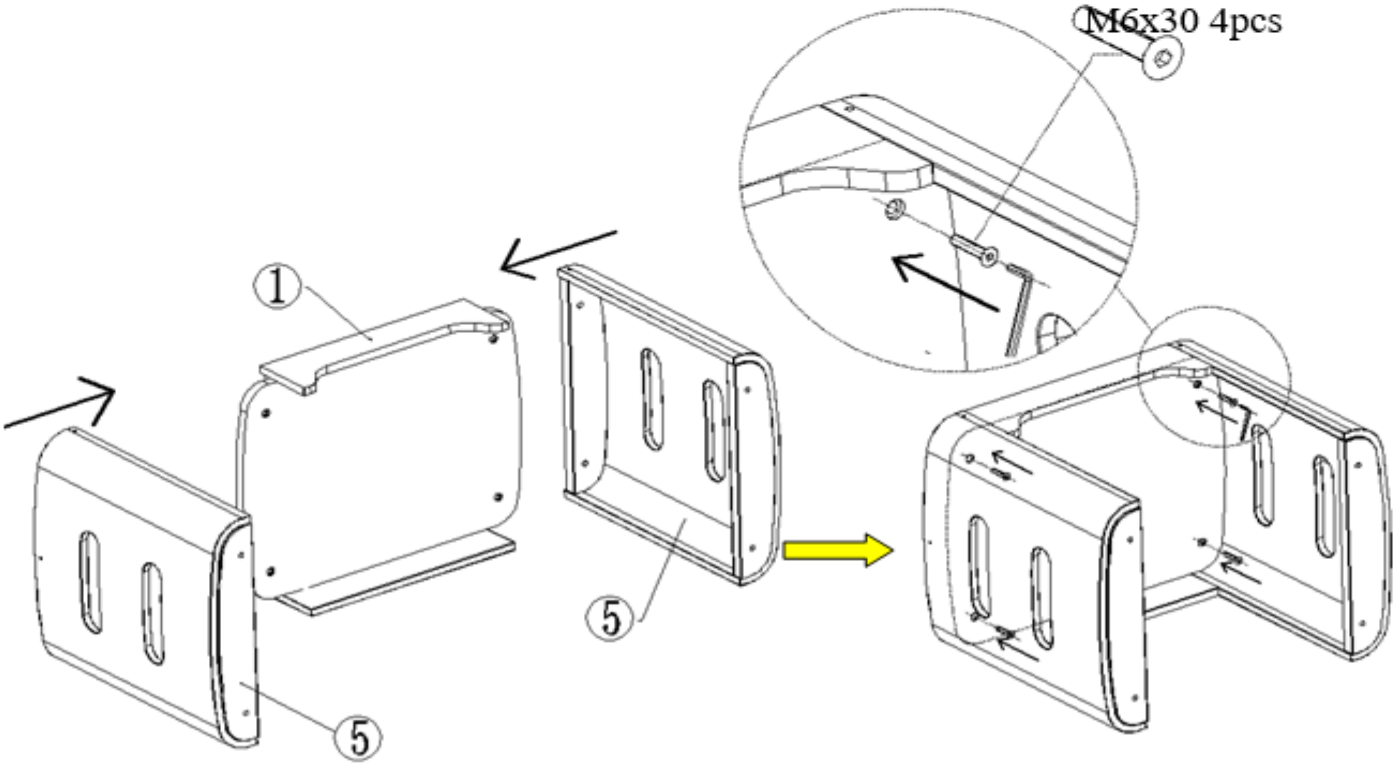


2. Attach parts ② and ④ together, then connect them to the wooden frame assembled in

the previous step. Secure the connection using four M6x50 screws, as shown in the image below.

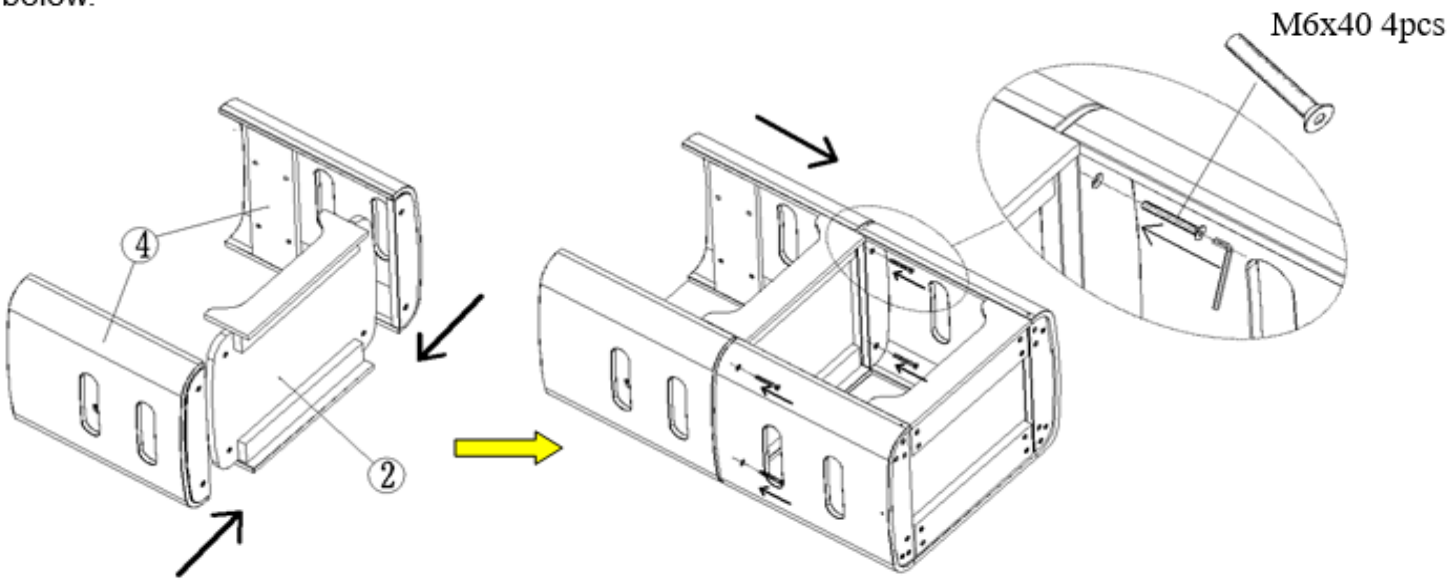


3.Assemble the drawer as shown in the image. Stand the previously assembled shelf upright, then place part ③ (the drawer) vertically into position. Pull the drawer outward and secure it from the inside using eight M6x30 screws, as illustrated in the image below.

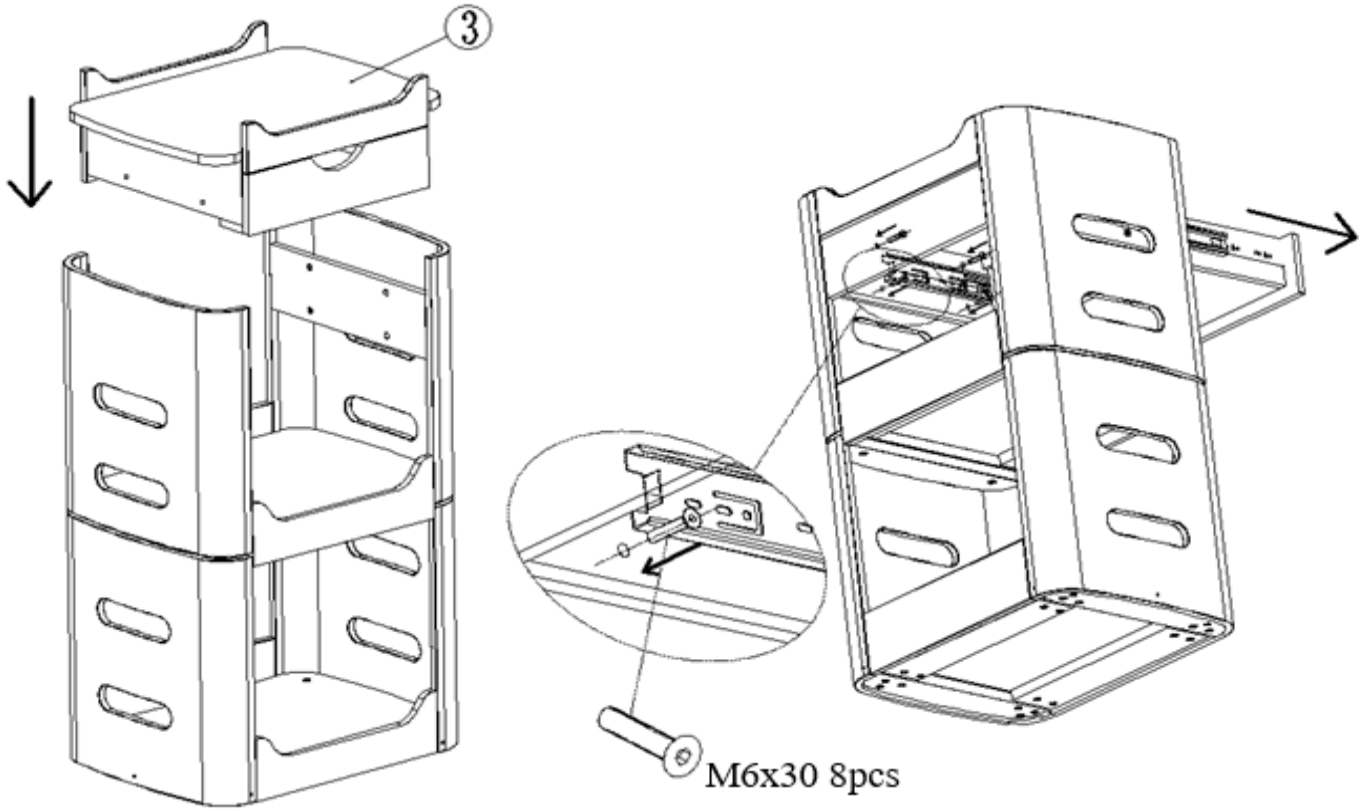

4.Install the wheels as shown below. Turn the cabinet upside down, then attach the wheels using screws. Make sure to install the wheels with locks on the front side (the side with the

drawer). Tighten all screws securely to complete the assembly.

M6x16 16pcs

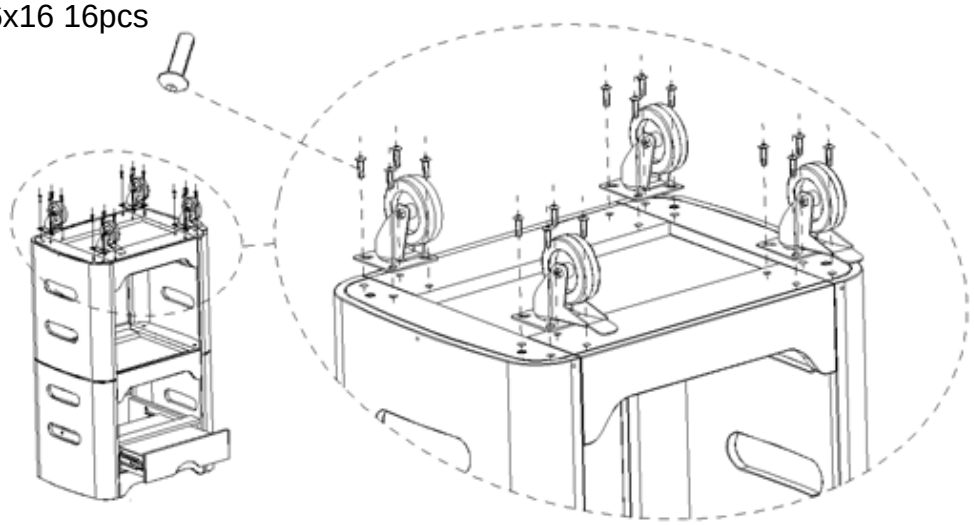

● Maintenance

1.Daily Cleaning
Use a soft, dry cloth to gently wipe away dust and maintain a clean surface.

2.Removing Stubborn Dirt
For tougher stains that cannot be removed with a dry cloth, use a soft cloth dampened with a diluted neutral detergent. After cleaning, wipe the area with a dry cloth to remove any residue.

3.Avoid Harsh Chemicals
Do not use benzene, thinner, gasoline, or other harsh solvents. These substances may damage the leather or corrode the product's surface.

4.Storage and Usage Conditions
Keep the product away from direct sunlight and humid environments, as these conditions may cause damage or deterioration.

5.Operating Temperature and Humidity
This product is designed for use in temperatures ranging from -5°C to 50°C, and humidity levels between 45% and 85%.

● Fault Diagnosis：

If you encounter any issues while using the product, please refer to the following checklist to identify and correct any improper operation:

Phenomenon	Diagnosis	Operation of elimination
Rattling and shaking of the body	Loose screws	Tighten all screws

Note: Product improvements that do not affect appearance or functionality may be implemented without prior notice.